



**ELEGANT
SANITARYWARE
FOR MODERN
LIVING.**



COMPANY PROFILE

Established in the heart of India’s ceramic hub, Morbi, ZARA Sanitary Ware is a leading manufacturer of premium-quality wash basins and closets. Since our inception, we have been committed to delivering innovative and stylish sanitary solutions that blend functionality with design excellence. With a strong foundation built on the expertise of our experienced directors, who have been part of the ceramic industry since 2006, ZARA Sanitary Ware is a trusted name in the market.

Our product range includes a diverse selection of sanitary ware, catering to various styles and preferences. We offer an array of wash basins, including tabletop, pedestal, and wall-mounted designs, each crafted to elevate bathroom aesthetics. In addition, we manufacture closets in multiple types such as one-piece, wall-hung, and other contemporary designs, providing comfort and elegance for every bathroom space.



QUALITY THAT SPEAKS

We prioritize exceptional quality in every product, ensuring that our sanitary ware meets rigorous standards for durability, safety, and performance, giving our customers peace of mind.



LUXURY AT FINGERTIP

Our designs embody luxury and sophistication, transforming bathrooms into elegant spaces. We believe that style and comfort should go hand in hand, making each piece a statement of refinement.



R & D AT PEAK

Committed to innovation, our dedicated research and development team continually explores new technologies and materials, allowing us to introduce cutting-edge products that enhance user experience and meet evolving market demands.



MADE IN INDIA

Proudly embracing the “Make in India” initiative, we focus on producing our Sanitaryware locally, contributing to the nation’s economy while ensuring that our products are crafted with precision and care right here at home.



CHARACTERISTICS



Weight Test
All seats and covers are subjected to a weight test.



Open/Close Test
All seats and covers are subjected to an open/close test.



Odor Test
All WC pans are subjected to an odor leakage test.



1 Ltr. Urinals
Saves water with only 1 Ltr. of water consumption.



Soft Close Seat & Cover
Soft Close Seats & Covers Soft Closing and silent Special technology




Requires very little space and Provides easy bottom cleaning.




Anti Bacterial Glazed

PRODUCT FEATURES

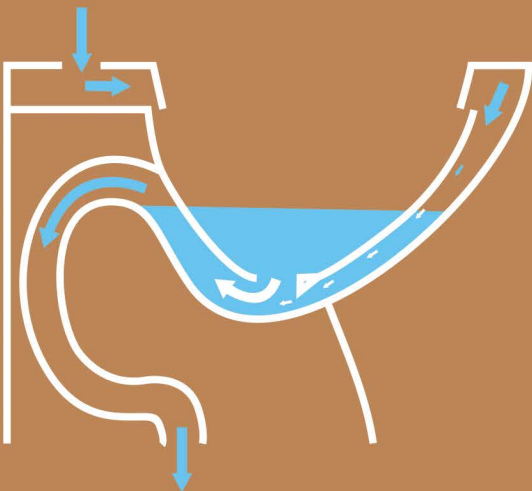


Siphonic flushing

- Quieter & powerful flushing
- Odorless because of the high water level in the closet
- Water-efficient flushing

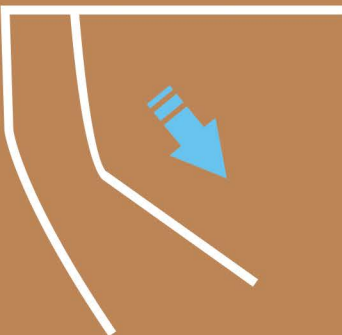

Rimless flushing

- Quick & easy to clean
- Provides more day to day hygiene
- Superior flushing as it distributes water around the closet more effectively

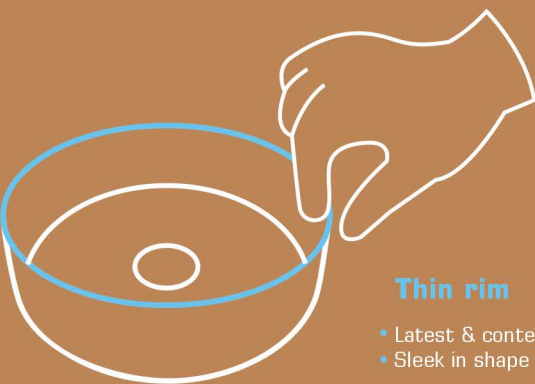

Thin rim

- Latest & contemporary design format
- Sleek in shape but strong and durable

Manufacturing Excellence


At **ZARA** Sanitaryware, manufacturing excellence is the cornerstone of our operations. We employ state-of-the-art technology and advanced production techniques to ensure that every piece of sanitaryware meets our rigorous standards for quality and performance. Our skilled workforce is trained in the latest manufacturing practices, enabling us to maintain precision and consistency throughout the production process.

With a focus on efficiency and sustainability, we continuously optimize our manufacturing processes to reduce waste and enhance productivity. This commitment to excellence not only guarantees superior products but also reflects our dedication to customer satisfaction and environmental responsibility.




INDEX

	One Piece Closet	10
	Wall Hung Closet	19
	Table Top	22
	Wash Basin Pedestal	30
	One Piece Basin	33
	Wash Basin Half Pedestal	34
	Wash Basin	37
	One Piece Half Basin	41
	Lab Sink	43
	Under Counter Basin	44
	Water Closet	45
	Urinal	48
	Pan	51

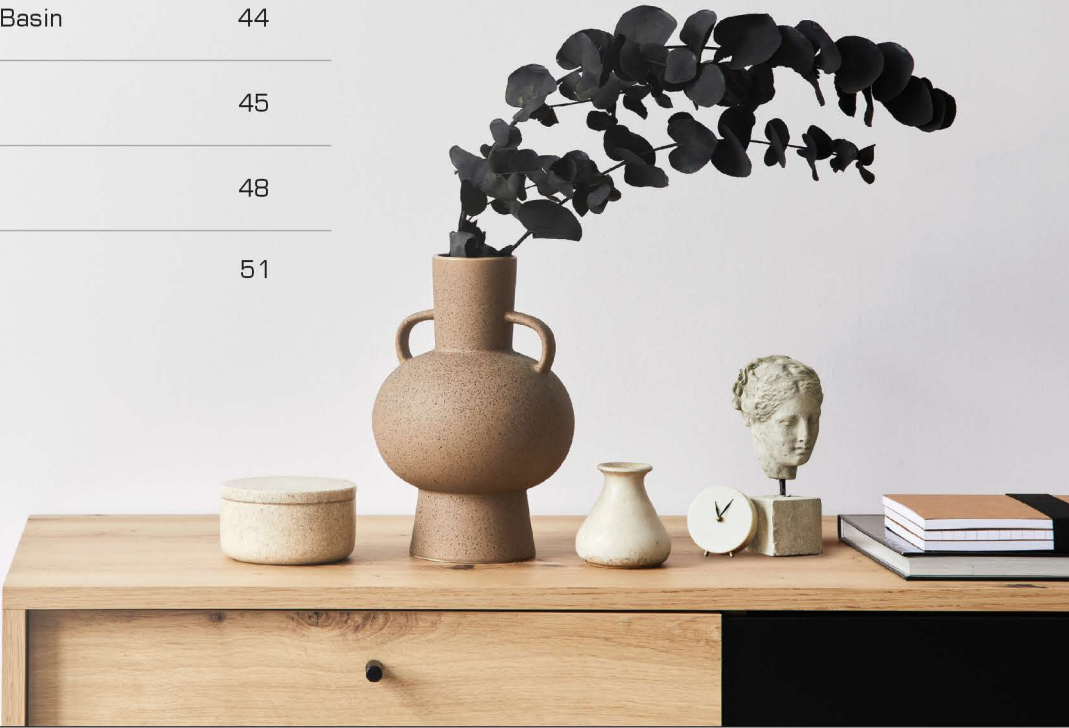




1D TORNADO FLUSHING

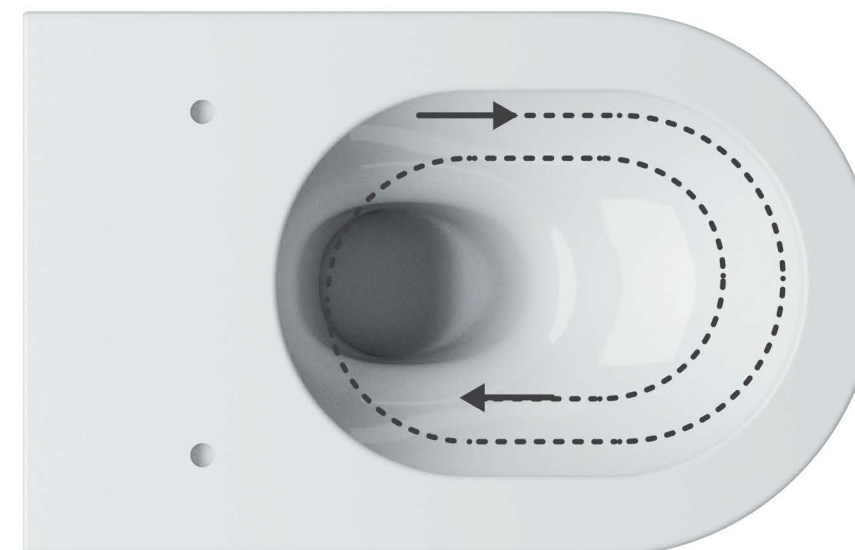

FAST WASH AESTHETIC & HYGIENE 7D TECHNOLOGY

BEGINNING OF A NEW ERA
OF 7D TECHNOLOGY

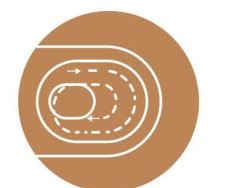

1D TORNADO
FLUSHING




NEW GLAZE




TALLIS - 101

660x360x735mm
Boxrim, Rimless, Wash Down
S-Trap : 100mm, 225mm, 300mm
P-Trap

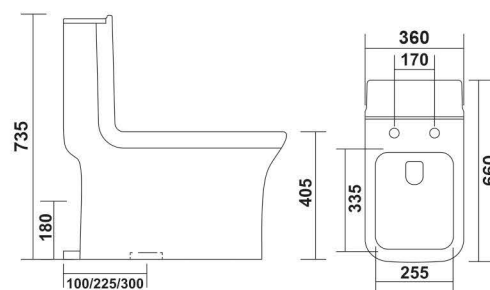


AMBER - 102

655x350x720mm
Boxrim, Syphonic
S-Trap : 225mm

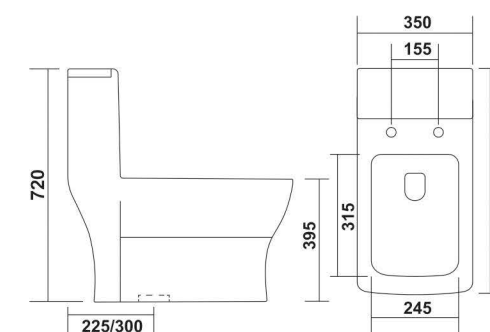

EPIC - 103

685x360x730mm
Boxrim, Wash Down
S-Trap : 100mm, 225mm
P-Trap

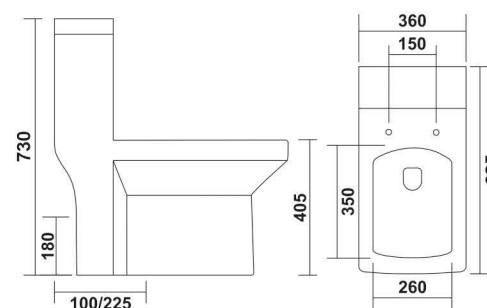




PRIVE - 104


665x360x750mm
Rimless, Wash Down
S-Trap : 225mm,300mm
P-Trap

5D, Syphonic
S-Trap : 225mm,300mm

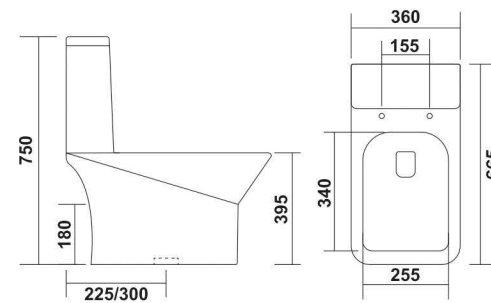

INDUS - 106


675x355x755mm
Boxrim, Wash Down
S-Trap: 225mm
P-Trap

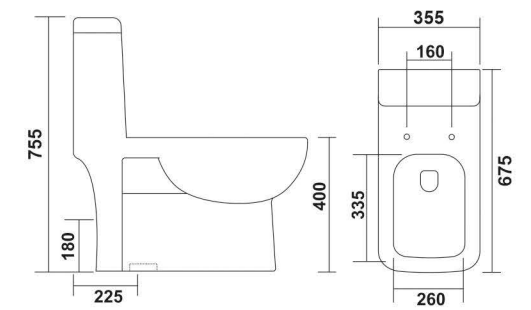

AERO - 105


660x360x730mm
Boxrim, Wash Down
S-Trap : 225mm,300mm
P-Trap

S-Trap : 225mm,300mm

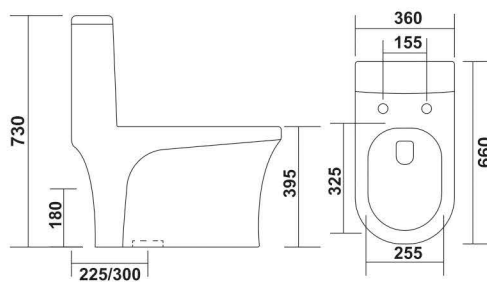

JAZZ - 108

665x345x725mm
Boxrim, Wash Down
S-Trap : 225mm
P-Trap

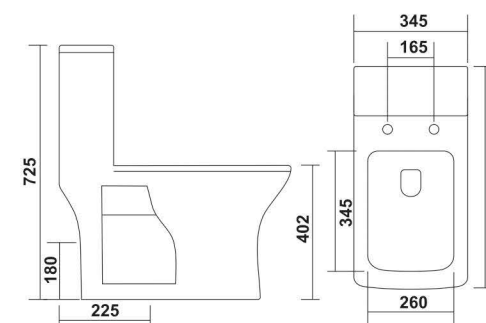




NEOS - 110

675x360x750mm
Rimless, Wash Down
S-Trap : 225mm
P-Trap


2D, Syphonic
S-Trap : 225mm,300mm

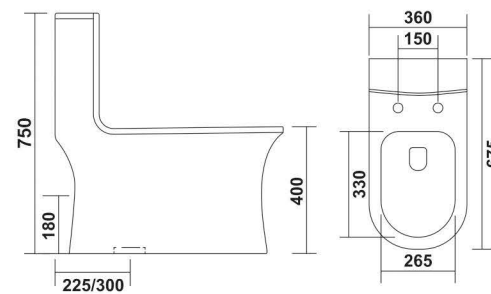

DUCK - 112


660x360x750mm
Rimless, Wash Down
S-Trap : 225mm,300mm
P-Trap

6D, Syphonic
S-Trap : 225mm,300mm

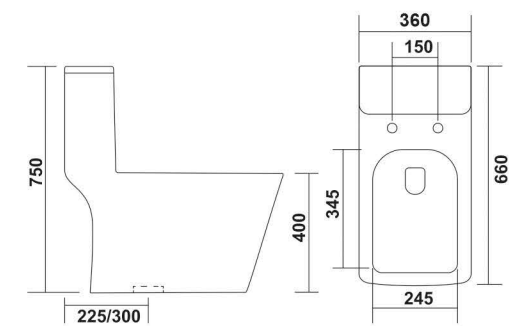

PENTA - 111


665x360x750mm
3D, Syphonic
S-Trap 225, 300mm

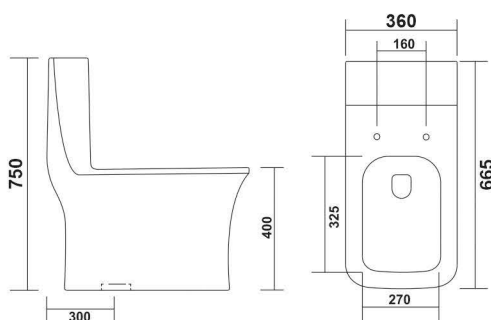


OBEN - 113

655x355x740mm
S-Trap : 225mm,300mm
P-Trap


6D,Syphonic
S-Trap : 225mm,300mm

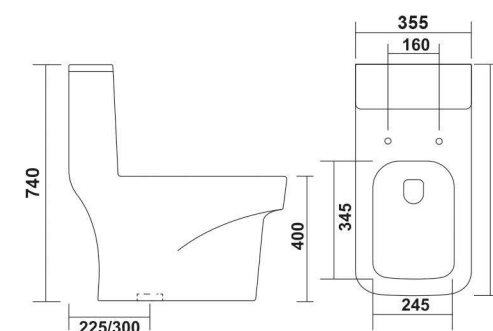

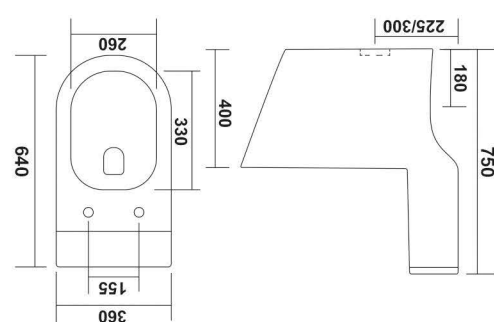


640x360x750mm
Rimless, Wash Down
S-Trap : 225mm
P-Trap
1D, Syphonic
S-Trap : 225mm, 300mm
5D, Syphonic
S-Trap : 225mm, 300mm
7D, Syphonic
S-Trap : 225mm, 300mm

ROBS - 115

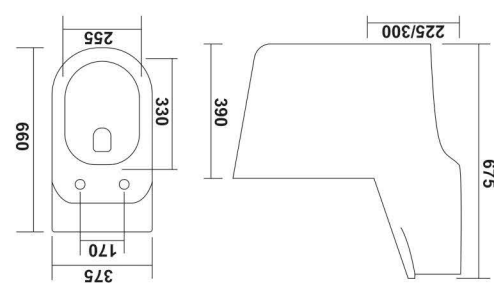


660x375x675mm
S-Trap : 225mm
3D, Syphonic

VOLVO - 114

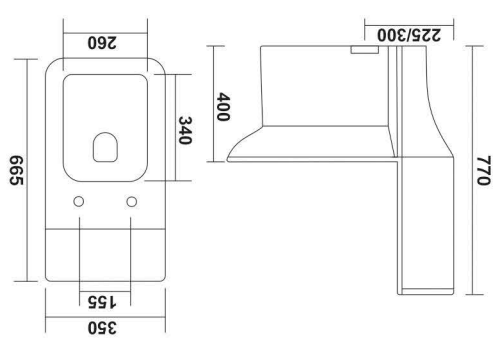

665x350x770mm
Rimless, Wash Down
S-Trap : 225mm
P-Trap
2D, Syphonic
S-Trap : 225mm, 300mm
5D, Syphonic
S-Trap : 225mm, 300mm
6D, Syphonic

ORIO - 117

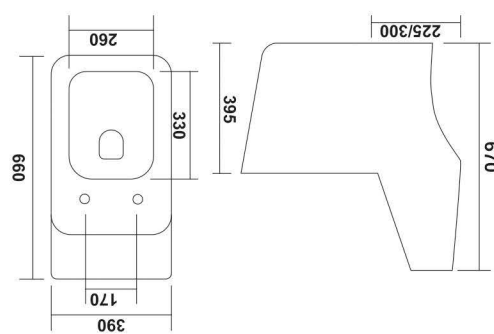

660x390x670mm
S-Trap : 225mm
6D, Syphonic


BENZ - 116






ONIX - 118

650x350x730mm
Boxrim, Wash Down
S-Trap : 225mm
P-Trap

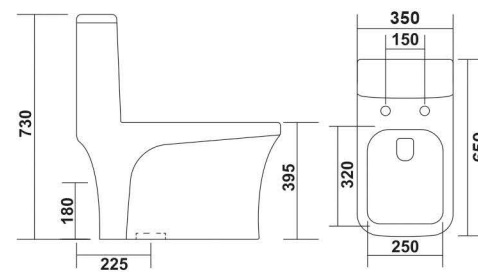


NECTAR - 119

680x360x730mm
Boxrim, Wash Down
S-Trap: 225mm, 300mm
P-Trap

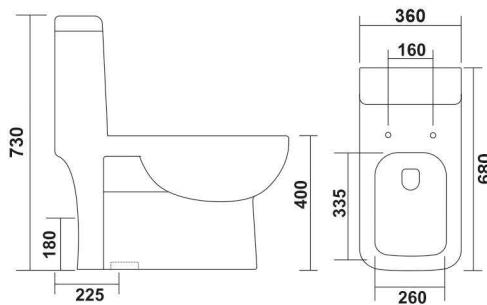


OPUS - 120

655x355x730mm
Rimless, Wash Down
S-Trap : 225mm, 300mm
P-Trap

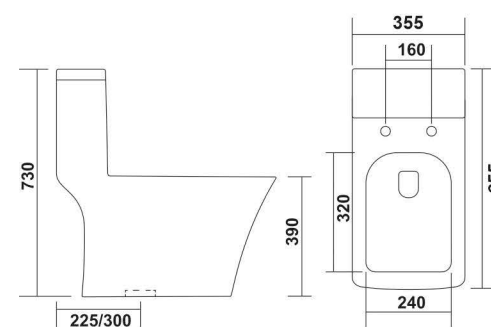

LUCA - 201


525x355x360mm
Rimless
P-Trap

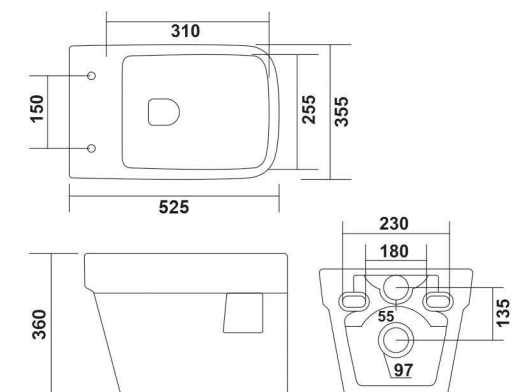




TULIP - 202

515x380x365mm
Rimless

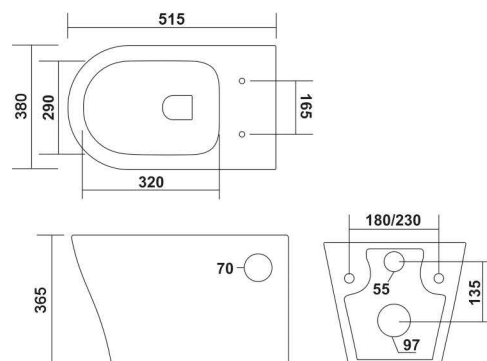


CASA - 203

515x350x340mm
1D, Tornado

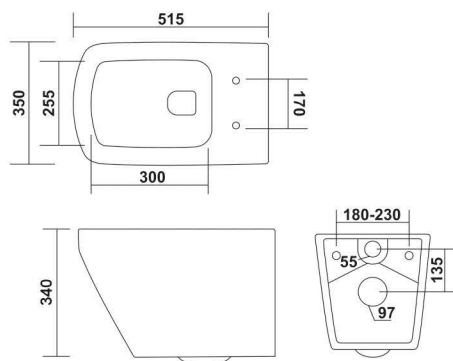


FLUE - 204

520x365x360mm
Rimless
P-Trap

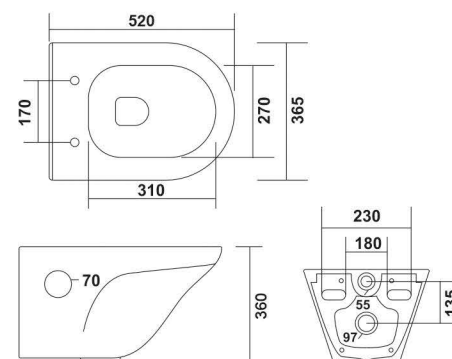


VERA - 205

535x355x370mm
Rimless

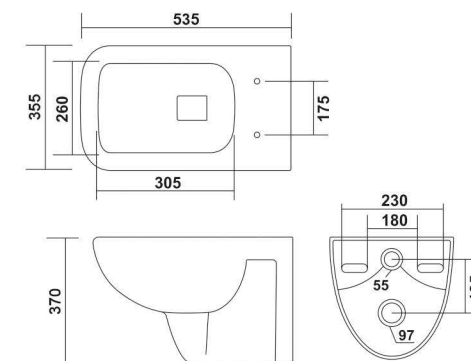


TONIA - 206

535x360x355mm
Rimless

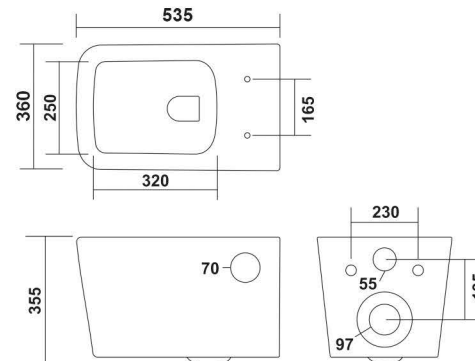

DIAMOND - 207


510x345x350mm
Rimless

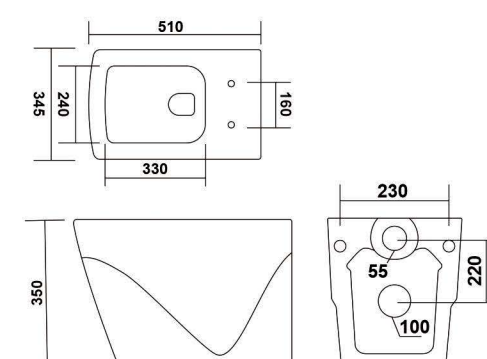




401

610x360x120mm
Thinrim

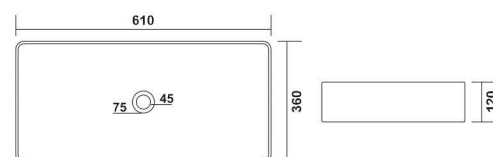

402

700x350x140mm
Thinrim

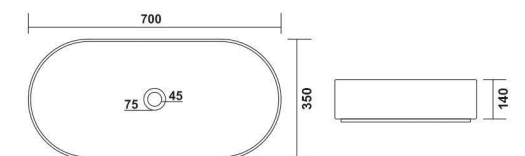

403

560x410x135mm

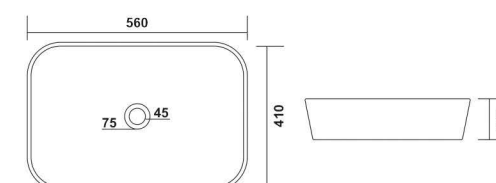




TABLE TOP BASIN



404

415x315x140mm
Thinrim


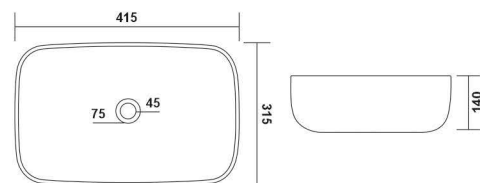


TABLE TOP BASIN




407

370x425x130mm

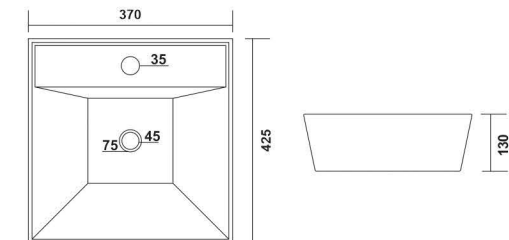


405

460x325x140mm
Thinrim

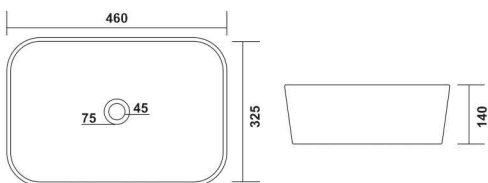


408

355x450x130mm

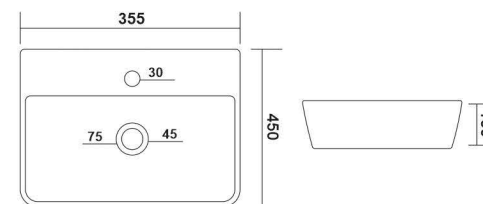


406

320x445x130mm

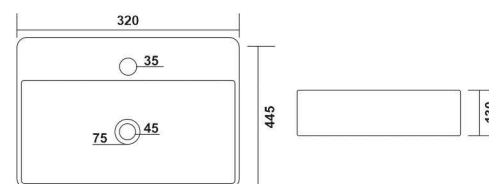

409


490x360x125mm

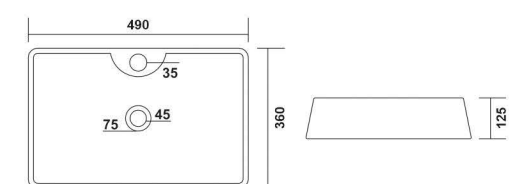




410

280x325x135mm

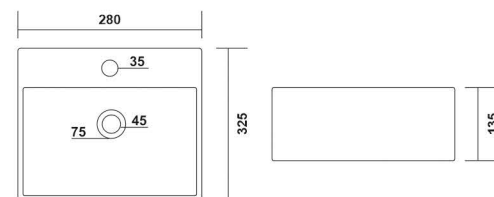


411

420x345x165mm

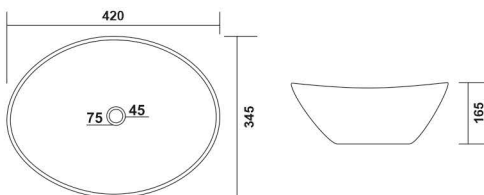


414

470x360x130mm

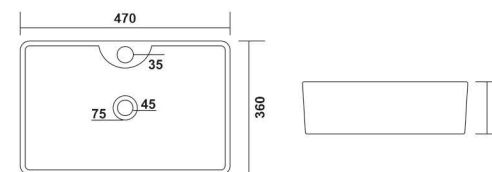


412

315x420x125mm
Thinrim

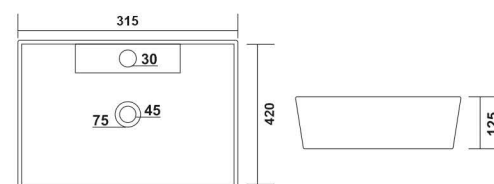

415


425x420x140mm

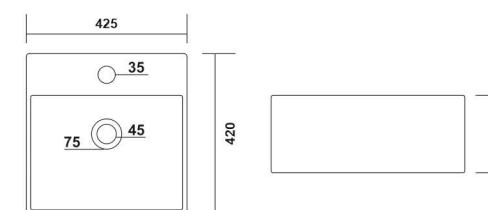




416

370x470x130mm
Thinrim

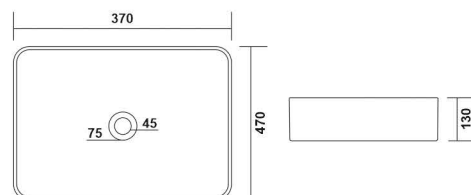


417

385x505x140mm

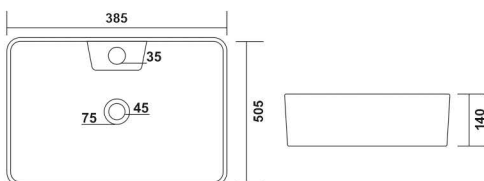


420

500x400x130mm
Thinrim

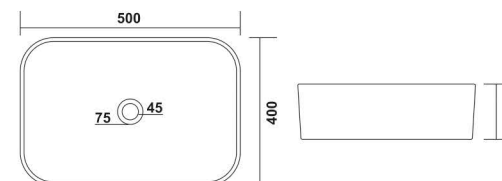


419

405x405x130mm

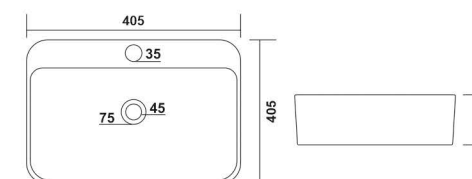


421

350x350x145mm

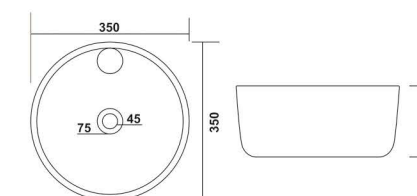

418


350x545x140mm
Thinrim

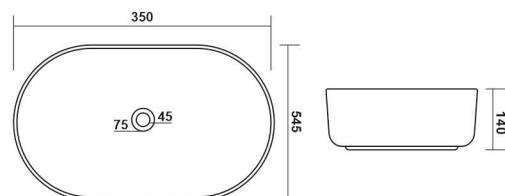




ALFA BASIN - 501
DELTA PED. - 01

560x430x800mm
22"x16"

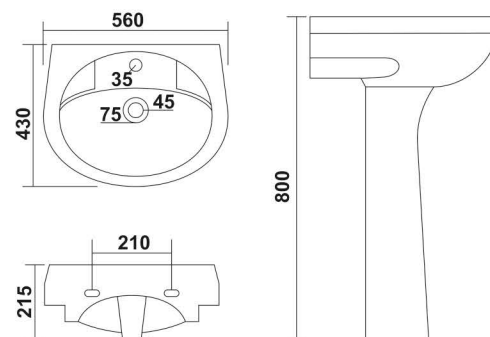


BETA BASIN - 502
DELTA PED. - 01

545x430x750mm
22"x16"

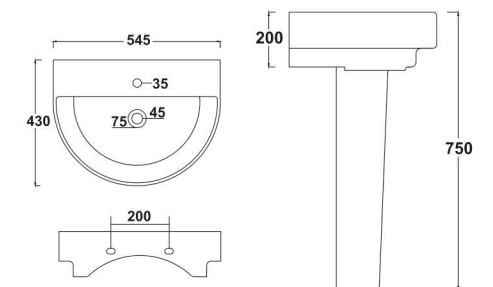


GAMA BASIN - 503
DELTA PED. - 01

410x510x850mm
16"x20"

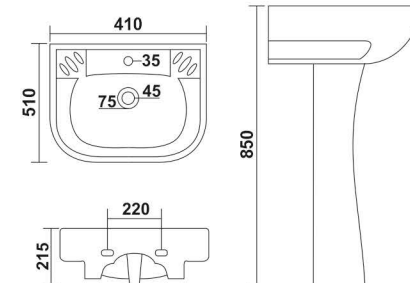

ASTA BASIN - 504
POLO PED. - 02


425x670x870mm
22"x16"

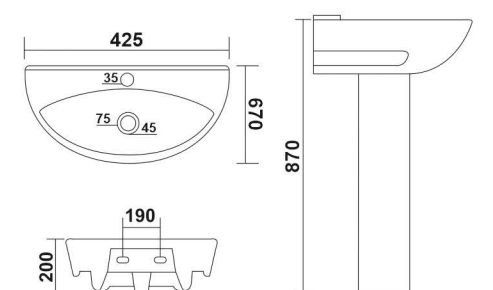




CAMRY BASIN - 8001
RIVA PED. - 03

570x420x770mm
22"x16"

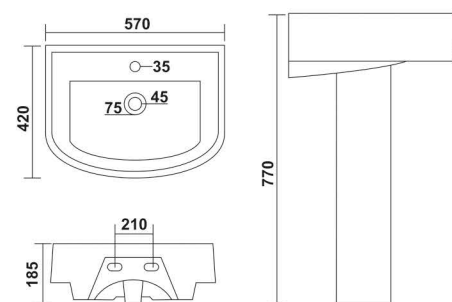


LOTUS BASIN - 505
RIVA PED. - 03

600x470x770mm
24"x19"

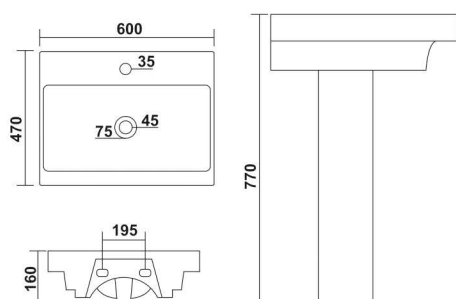


CADILA - 15001

420x435x800mm

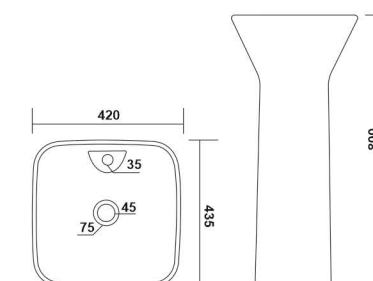


COSMO - 15002

400x400x800mm

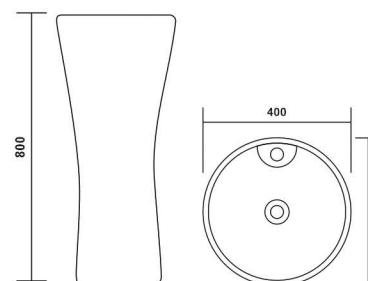

VIPRO - 15003

385x405x820mm

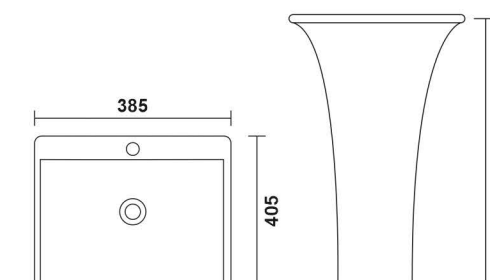




WASH BASIN HALF PEDESTAL



CAMRY BASIN - 8001 CROMA PED. - 52

545x430x450mm
22"x16"

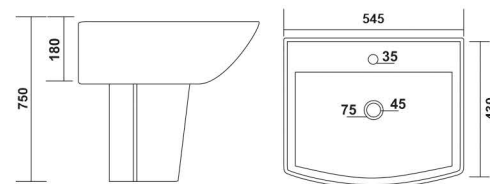


WASH BASIN HALF PEDESTAL




CLASSY BASIN - 8002 CROMA PED. - 52

600x470x450mm
24"x18"

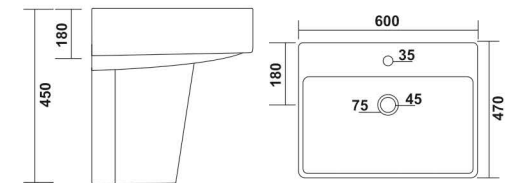

CELO BASIN - 8003 SIGMA PED. - 51


480x365x460mm
19"x14"

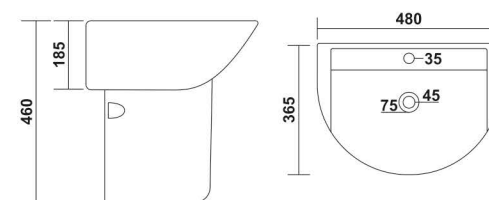




BLISS BASIN - 8004
CROMA PED. - 52

590x470x425mm
23"x18"

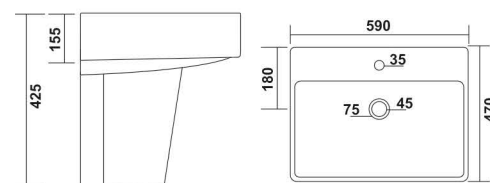


ROME BASIN - 8005
ELICA PED. - 53

345x455x420mm

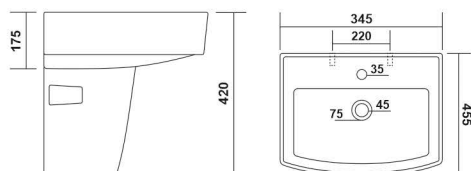


LIVON BASIN - 8006
SIGMA PED. - 51

460x370x455mm
18"x14"

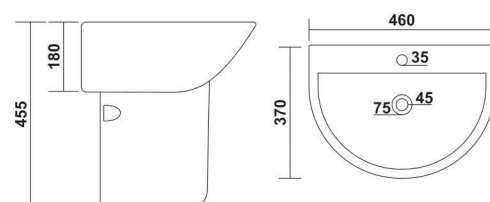

VEGA - 701


240x415x120mm

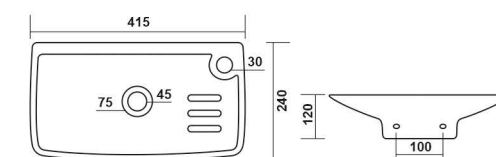




DUSTER - 702

320x460x200mm
18"x12"

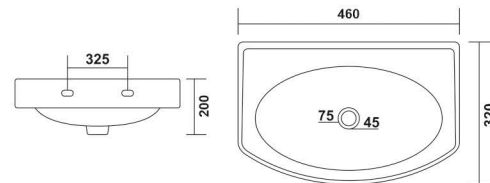


GRAND - 704

340x445x175mm
18"x13"

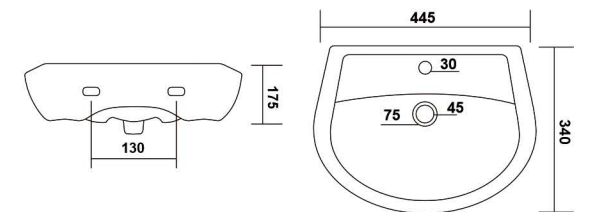


FORCE - 703

315x455x170mm
18"x12"

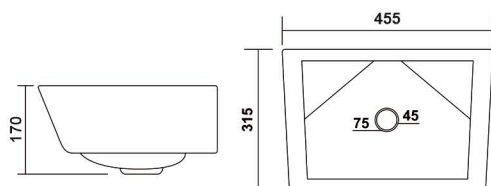

NEXO - 705


380x365x155mm
15"x15"

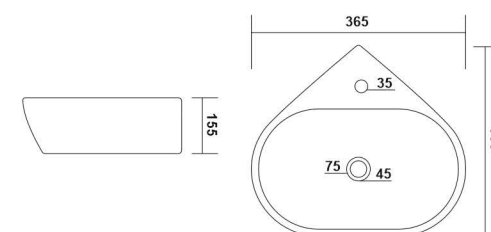




CROWN - 706

410x330x135mm
16"x13"

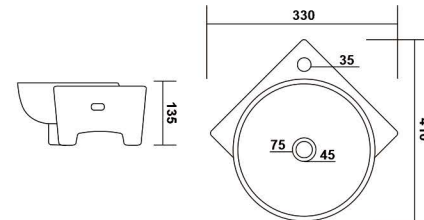


CANDY - 707

365x260x130mm
15"x11"

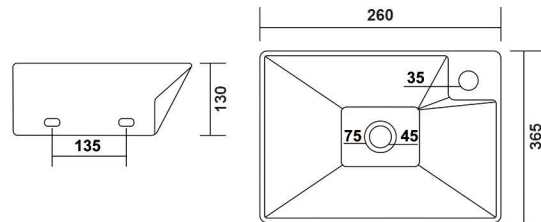


ZARA - 708

385x395x140mm
15"x15"

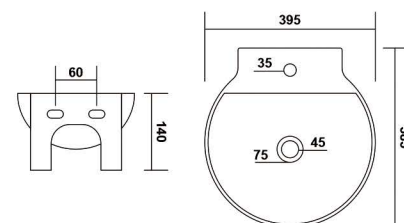

WAVE - 5001


505x435x405mm

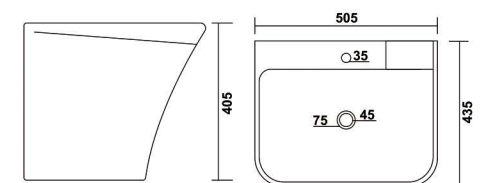




ENZO - 5002

505x445x400mm

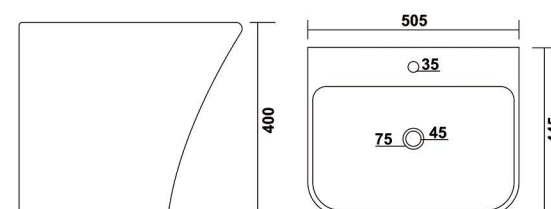


ZIBA - 5003

425x485x330mm

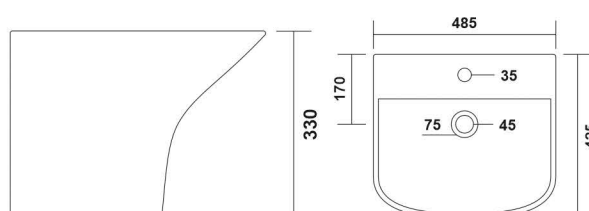

LIVA SINK

520x370x200mm

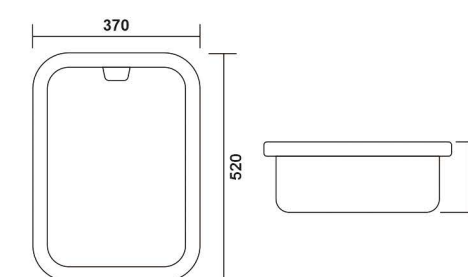




UNDER COUNTER BASIN




LAKME SINK

625x470x280mm

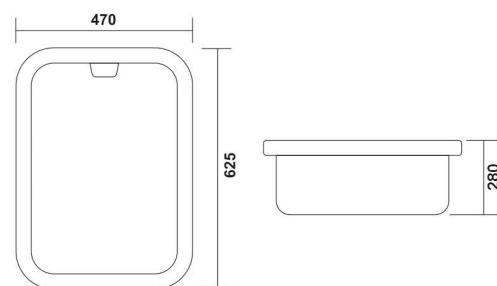

VENITY

445x595x260mm
24"x18"

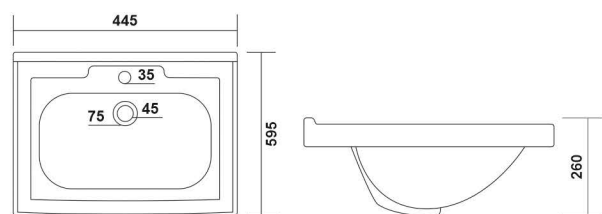


WATER CLOSET



ANGLO - P (6006)


520x460x420mm

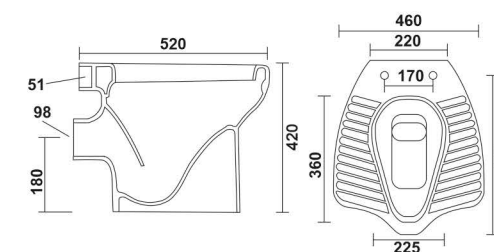




ANGLO - S (6005)

520x460x420mm

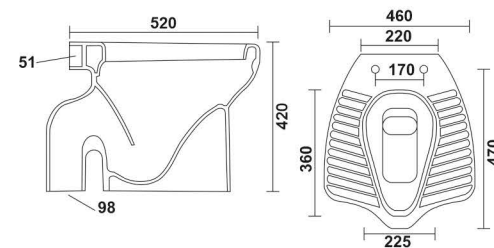


MEGA - 6001

535x350x395mm
Boxrim
S-Trap : 100mm
P-Trap : 180mm

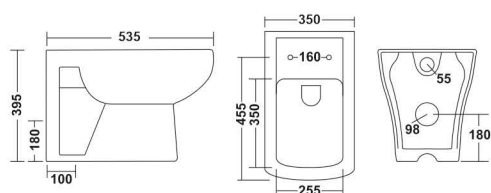


ERA - 6002 (EWC)

565x375x405mm
P-Trap : 180mm

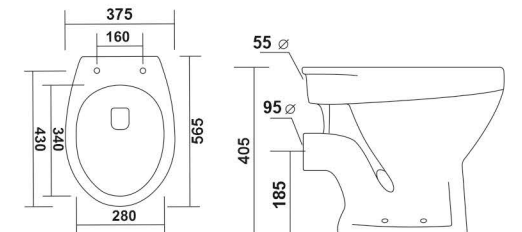


EROS - 6003 (EWC)

565x375x405mm
S-Trap : 100mm

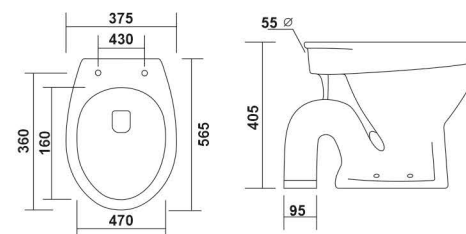

IRIS - 6004 (Concealed EWC)


570x365x400mm

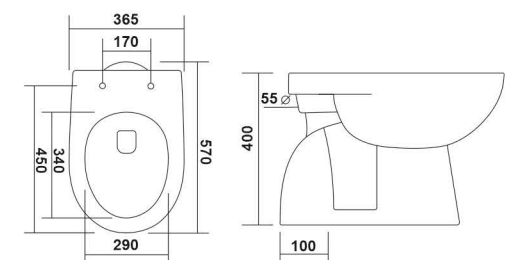




SHE URINAL

465x380x110mm

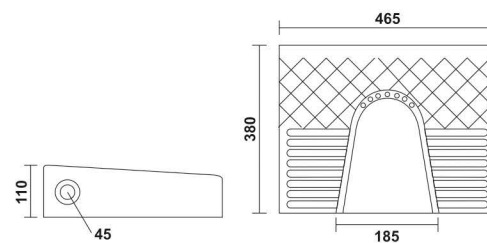


RASSO - 901

290x290x585mm

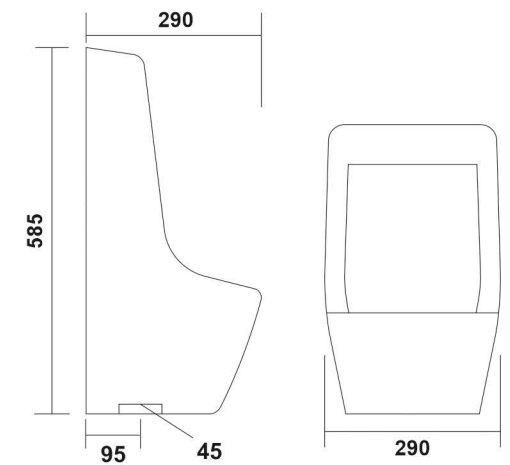

BEN - 902


345x410x615mm

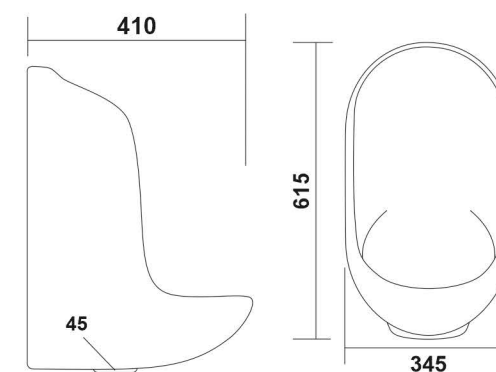




AXEL - 903

270x290x405mm

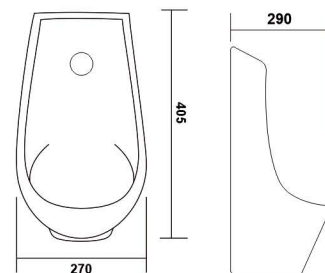


LUCAS - 904

275x300x350mm

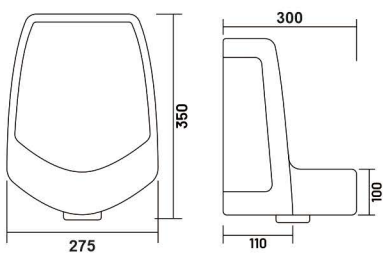


TARA - 905

320x250x400mm

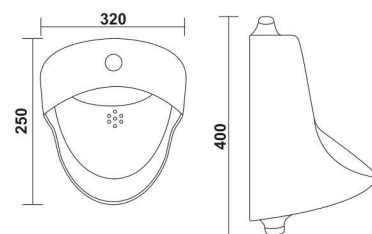

ORRISA PAN 23" - 1001


585x435x280mm

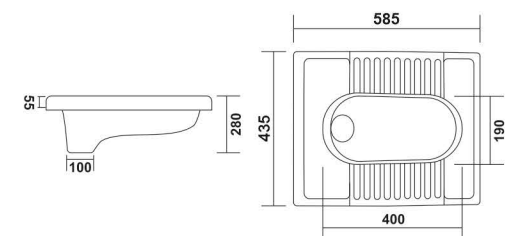





ORRISA PAN 20" - 1002

510x410x255mm

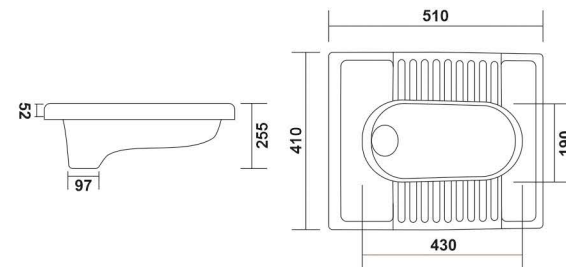

CITY PAN 20" - 1003

510x405x170mm

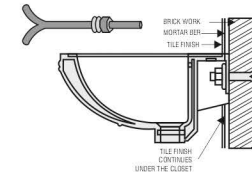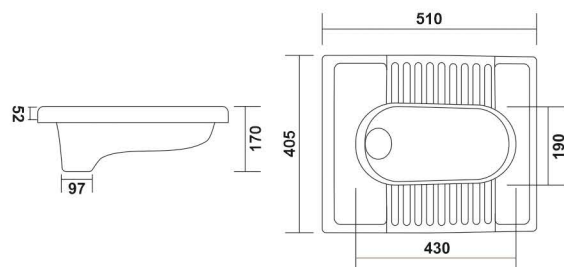


WALL HUNG BASIN

As per shown in the picture, the rag bolt must be grouted into the cement/concrete wall. The bolts must be fixed to the cement/concrete wall. Allow setting & checking than install it using nut and washer.

COUNTER WASHBASIN

At the beginning

1. A skilled or experienced person should install counter lavatories.
2. Avoid using adhesive with this product.
3. Check the waste area and supply tubing if required.
4. Do not open the lavatory from its protective carton until you are ready for installation.
5. Please follow all local building and plumbing codes.

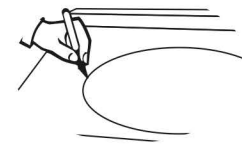


MATERIAL & TOOLS

Measure tape, Keyhole or saber saw, Hammer, Glasses, Rags or Paper toweling, Drill (1/2 dia, drill bit or larger), Pencil, sealant, sharp knife or scissors.

INSTALLATION OF LAVATORY


Please Note : Please install it in a way that future removal from underneath the counter top is possible without damaging the counter top.

1. Please check the desired location for clearance between the back splash, faucet, Fixture and cabinet.
2. Please cut the template.
3. Please carefully trace the template on the counter top directed.
4. Please mark the faucet hole centerline on the counter top.
5. Please drill a 1/2" pilot on the inside of the cut line.

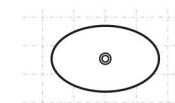

For Wood Counter tops:

1. Mark and per-drill the wood screw holes at the locations shown on the template.
2. Waterproof any exposed areas of wood.

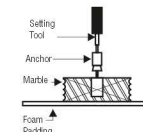

For Marble Counter tops:

1. Position the counter top upside down on foam padding to protect the surface. Mark and drill 3/6" holes 5/8" deep at the locations shown on the template.
2. Use a setting tool and hammer to secure the anchors.



For All Installations:

1. If the counter top has not been installed, install it at this time.
2. Drill the faucet holes according to the faucet installation instructions.
3. Install the faucet to the counter top according to the manufacture's instructions.
4. Install the drain to the lavatory according to the manufacture's instructions.

MAINTENANCE

Like any other part of your house, the bathroom can be made to look great and made to last long if it is taken care of regularly. To make your bathroom beautiful here are some invaluable tips.

Wash Basin :

A mild detergent can be used to wash the basin at least once a day. After washing, the basin should be wiped out clearly to avoid water stains.

Closets :

Cleanser like Harpic can be used to clear the closet with soft plastic brush, at least once a day.

To avoid minute discoloring, after flushing the toilet give it a once over with the soft brush.

Keep the toilet brush handy in a convenient stand nearby.

In case of toilets and basins, if there has been no maintenance since long period of time, water deposits and discoloration can form on the surface of areas that get wet.

In such cases, these stains/marks can be removed with the help of a solution of dilute hydrochloric acid.

Clean with a soft cotton cloth and warm water with soap.

Do not use thinner, day cleaning liquids or powder paste. Use a liquid cleaner at least twice a week.

Use brasso or car rubbing compound and then polish with a cloth to remove fine scratches.

NOTE

